
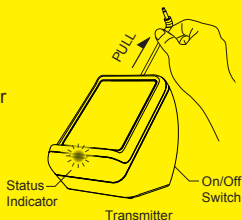


# Read Me First!

## Quick things to know before starting:

1. Your wireless transmitter will not transmit to the speaker until the on/off switch (located at the rear bottom left) is switched to "ON". The volume of your device (e.g. iPod®, Laptop, TV, MP3 Player, etc.) must be set to medium or higher. A higher volume setting is typically better.
2. The transmitter status indicator shows you when the transmitter is on (green) or transmitting (blue). The speaker status indicator shows when the speaker is on (green) or receiving a signal from the transmitter (blue).
3. The plug that connects to your device is retractable. You can gently pull it out to over 12-inches in length. A second gentle tug will get it to retract.
4. Your speaker is splash resistant. The transmitter is not splash resistant. Care should be taken to keep your transmitter dry.
5. When not in use, remove the speaker from wet areas. Storing the speaker indoors will best preserve its waterproof gaskets and will maximize the lifespan of the speaker.

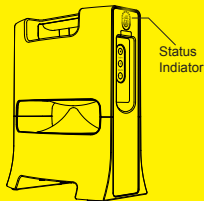

Turn Device Volume Up

Thank you for your purchase and enjoy your Tower Wireless Speaker!