
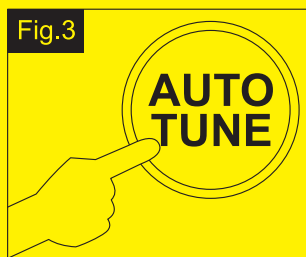


# Read Me First!

Inside are three quick things you  
need to know about your new  
Wireless Outdoor Speakers:

1. The retractable Audio Cord of Transmitter can be pulled out over 12-inches length, and connected to any Audio Source such as i-Pod, i-Phone, Hi-Fi, MP3/CD/VCD/DVD players etc. A slight tug of the Audio Cord will get it retracted. (Fig.1 below)
2. The Transmitter will not transmit to the Speakers until the Volume of the Audio Source is adjusted to medium to high level. (Fig.2 below)
3. On each of the working Speakers, press the button AUTO TUNE for best Signal Reception. (Fig.3 below)

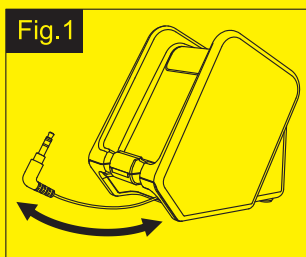

These Wireless Speakers are water resistant to water splash and slight rain. **DO NOT** sink it in water on purpose.

The Wireless Transmitter is **NOT** water resistant, and should be used with care like other electronic device.

Move the Speakers indoors when weather conditions are extreme.

Thank you for your purchase and enjoy your Wireless Outdoor Speakers!